

Replacement Parts Listing

APT Replacement Parts

101	LOCKWASHER	180	FRONTHEAD W/1-1/8" BUSHING (234)
102	LOCKWASHER	181	FRONTHEAD W/1-1/4" BUSHING (234)
103	SWIVEL NUT	182	FRONTHEAD COMPLETE 1-1/8" (234)
104	AUTO VALVE	183	FRONTHEAD COMPLETE 1-1/4" (234)
105	LEVER PIN	187	AIR INLET BUSHING
106	STEM BUSHING	189	NUT
107	THROTTLE SPRING	191	BUSHING (7/8 X 3-1/4")
108	OIL PLUG	192	BUSHING (1" X 4-1/4")
109	FRONTHEAD SPRING	193	PISTON
110	NUT	194	FRONT CHEST
111	FELT PLUG	195	REAR CHEST
112	OILER FELT	196	AUTO VALVE
113	BACKHEAD PLUNGER	197	VALVE GUIDE
114	PLUNGER SPRING	198	BOLT & NUT (ASSEMBLY)
115	PIN	199	PIN
116	VALVE GUIDE	203	STEEL RETAINER BOLT NUT
117	REAR CHEST	204	PLUNGER SPRING
118	PISTON	205	BOLT BUSHING
121	NUT	206	BOLT, NUT, & WASHER (ASSEMBLY)
122	BOLT, NUT, WASHER (ASSEMBLY)	207	RETAINER PLUG
123	SCREEN	208	NUT
124	SWIVEL PIPE	209	OIL PLUG (2)
125	PLUNGER SPRING	211	PIN
126	RETAINER PLUNGER	212	BUSHING
127	RUBBER BOLT BUSHING	213	THROTTLE PLUNGER
128	RETAINER BOLT & NUT (ASSEMBLY)	214	PLUNGER BUSHING
129	NUT	215	THROTTLE SPRING
130	RETAINER LATCH	216	THROTTLE VALVE
132	LEVER	222	INLET NIPPLE
133	THROTTLE VALVE	233	LOCK WASHER
136	TAPPET	237	THROTTLE VALVE SPRING
137	TAPPET SEAT	238	HANDLE PIPE
138	LOCKWASHER	251	PIPE LOCK NUT
141	FRONT CHEST	253	UPPER VALVE BLOCK
143	BARE FRONTHEAD	254	MAIN VALVE
144	BUSHING (1-1/8" X 6")	255	VALVE PLATE
145	BUSHING (1-1/4" X 6")	257	DOWEL PINS (FOR VALVE ASSEMBLY)
150	VALVE PORT SEAL "O" RING	260	5-3/4" MALLEABLE IRON B.S.
151	"O" RING	261/3461	BOLT, NUT, & WASHER (ASSEMBLY)
152	OIL TANK PLUG	262	TAPPET
153	TAPPET SEAT	263	WASHER
154	LOCKWASHER	272	NOZZLE (ROUND)
155	BACKHEAD BOLT NUT	273	NOZZLE (HEX)
157	RETAINER BOLT & NUT (ASSEMBLY)	274	THROTTLE LEVER PIN
160	RUBBER GRIP	276	THROTTLE VALVE
162	BOLT BUSHING	277	THROTTLE VALVE
163	FRONTHEAD W/1-1/8" BUSHING (125)	279	THROTTLE VALVE SPRING
164	FRONTHEAD W/1-1/4" BUSHING (125)	280	THROTTLE VALVE PLUG
166	FRONTHEAD (1-1/4")	283	THROTTLE VALVE "O" RING
167	SWIVEL NUT W/"O" RING	285	REDUCER (1/2M X 3/8F)
168	OIL PLUG	286	PERMANENT BUSHING
169	VALVE GUIDE	290	REDUCER (3/8M X 1/4F)
170	VALVE CHEST FRONT	292	PUSH PIN
171	VALVE CHEST REAR	302	PLUNGER SPRING
174	PISTON	303	LOCK WASHER
175	TAPPET SEAT	306	PIN
178	SCREEN	307	PIN
179	SWIVEL PIPE	311	OIL CONTROL BUSH-BRASS

Replacement Parts Listing

APT Replacement Parts

312	MAIN VALVE	680	NUT
313	VALVE LID	682	LOCK WASHER
314	0-1 PISTON	684	BUTT SCREW
323	SWIVEL PIPE	686	AUTO VALVE
324	THROTTLE VALVE	687	TAPPET
327	PISTON	688	PISTON
375	PISTON	689	STEM BUSHING
376	THROTTLE VALVE PUSH PIN	690	BACKHEAD BOLT NUT
377	PUSH PIN BUSHING	691	BACKHEAD BOLT
384	TUBE VALVE BODY	693	BACKHEAD BOLT
385	PISTON	695	OIL PLUG
386	PISTON	698	AUTO VALVE
387	UPPER VALVE CASE LID	699	AUTO VALVE
388	LOWER VALVE CASE LID	702	REAR CHEST
389	VALVE CASE	703	PISTON
390	DOWEL PIN	706	NUT
391	VALVE	708	BOLT & NUT (ASSEMBLY)
392	PISTON 4	721	PACKING WASHER
426	BOLT & NUT ASSEMBLY	732	PACKING SET
427	VALVE ASSEMBLY	736	PACKING GLAND
527	RETAINER BOLT	740	PISTON
583	TAMPER PISTON-4RV-THREAD	743	VALVE PIN
594	PISTON	744	VALVE PIN
596	FRONTHEAD BOLT	745	SLEEVE SET
597	THROTTLE LEVER PIN	746	AUTO VALVE
598	THROTTLE VALVE SPRING	749	AUTO VALVE
599	NUT	759	SCREENED INLET BUSHING
609	TAPPET	770	BUFFER
610	TAPPET SEAT	781	PLUNGER BUSHING
611	BACKHEAD BOLT	785	BUSHING (7/8 X 3-1/4)
612	AUTOMATIC VALVE	792	PISTON
615	RETAINER LATCH	802	LEVER
617	RETAINER PLUNGER	805	SNAP HANDLE COMPLETE
618	BOLT BUSHING	807	THROTTLE BUSHING
619	RETAINER BOLT	808	LEVER
624	RETAINER PLUNGER SPRING	811	PISTON
625	BUSHING (1/8" X 6)	812	BACKHEAD NUT
629	"O" RING	813	THROTTLE SPRING
648	1/4" X 1/4" INLET BUSHING	816	LEATHER WASHER
651	STOP PIN	822	1-1/4" HEX BUSHING
655	1 1/8" HEX BUSH	830	MAIN VALVE
657	BACKHEAD BOLT	832	AUTO VALVE
660	PISTON	837	THROTTLE LEVER PIN
661	THROTTLE VALVE	859	HANDLE BOLT WASHER
662	INLET NUT	861	HANDLE BOLT NUT
663	INLET SWIVEL	862	PAWL
664	TAPPET	864	AUTOMATIC VALVE
665	RETAINER SPRING	865	RIFLE BAR
666	RETAINER PLUNGER	866	BRASS RIFLE NUT
667	RETAINER BOLT	867	PISTON
668	PISTON	869	SIDE ROD
671	SWIVEL PIPE	880	TAMPER PISTON
672	TAPPET SEAT	883	VALVE SEAT
673	TAPPET	884	VALVE LID
675	SWIVEL NUT	893	RETAINER
677	RETAINER	889	HANDLE GRIP
678	BOLT & NUT (ASSEMBLY)	891	PAWL
679	FRONTHEAD BOLT	892	CHUCK BUSHING (1" X 4-1/4")

Replacement Parts Listing

APT Replacement Parts

939	MALLEABLE IRON BUTT	1735	HANDLE COMPLETE
1056	PISTON	1743	CYLINDER PLUG
1124	FRONTHEAD BOLT ONLY	1746	GUIDE BUSHING "O" RING (2/TOOL)
1142	REDUCER	1778	CHUCK BUSHING (7/8" X 3-1/4")
1156	"O" RING	1780	BUSHING (1-1/8X6)
1158	RETAINER CLIP	1781	UPPER WASHER (2 PCS)
1188	"O" RING	1782	THROTTLE VALVE
1231	LOCK RING	1783	THROTTLE BUSHING
1233	VALVE SEAT	1784	VALVE SPACER
1238	BUSHING (3/4" SQ)	1785	EXHAUST DEFLECTOR
1248	VALVE BLOCK PIN	1786	"O" RING
1256	PIN	1788	REAR SEAL
1260	LOCK CLIP	1790	THROTTLE HANDLE COMPLETE
1261	SWIVEL NUT W/"O" RING	1814	"O" RING
1269	THROTTLE BUSHING "O" RING	1815	SWIVEL NUT
1282	BACKHEAD BOLT NUT	1816	SWIVEL PIPE
1316	RETAINER PLUNGER	1817	SPRING
1317	VALVE CHEST	1827	AIR INLET SCREEN
1318	VALVE LID	1883	DETENT PLUNGER
1381	TAPPET	1898	NUT
1382	TAPPET SEAT	1903	RING VALVE
1422	2" BARREL (CYLINDER)	1904	VALVE LID
1423	3" BARREL (CYLINDER)	1906	3/8" STREET ELBOW
1424	4" BARREL (CYLINDER)	1912	BUSHING (1-1/4X6)
1429	BLOW TUBE RUBBER SEAL	1918	THROTTLE SPRING
1433	TAPPET SEAT	1926	OIL FELT
1493	FRONT SEAL	1940	RETAINER
1518	RETAINER BOLT BUSHING	1941	LOCK SPRING
1523	THROTTLE LEVER STOP PIN	1945	THROTTLE PLUG
1524	THROTTLE LEVER PIN	1947	THROTTLE PLUNGER
1526	PLUNGER	1973	6" ALUMINUM BUTT
1532	LOCK WASHER	1984	"O" RING
1533	PISTON	1985	6" ALUMINUM BUTT (BUTT SCREW)
1534	PISTON	1987	BUSHING (1-1/4X6)
1556	SPRING	1992	PLUG
1557	PAWL SPRING	1999	BOLT & NUT (ASSEMBLY)
1558	CHUCK DRIVER	2000	THROTTLE VALVE SPRING
1611	RETAINER BOLT & NUT (ASSEMBLY)	2004	BUMPER
1628	BACKHEAD W/BUSHING	2005	RETAINER RING
1629	BACKHEAD W/BUSHING/DRY	2006	LOWER WASHER (2)
1630	BACKHEAD PLATE	2057	THROTTLE SPRING
1631	BLOW TUBE GLAND	2074	"O" RING
1632	THROTTLE VALVE	2078	PACKING LOCK NUT
1633	THROTTLE VALVE HANDLE	2103	STEEL RETAINER (1" X 4" X1/4")
1634	PLUNGER SPRING	2107	THROTTLE VALVE WASHER
1635	CYLINDER	2108	THROTTLE VALVE HANDLE
1636	FRONT WASHER BUSHING	2109	BLOW TUBE GASKET
1637	EXHAUST VALVE SPRING	2111	BLOW TUBE
1638	EXHAUST VALVE WASHER	2112	RET. LATCH PLUNGER SPRING
1639	EXHAUST VALVE PIN	2124	WATER TUBE
1640	VALVE GUIDE	2129	SWIVEL NUT "O" RING
1641	FRONT VALVE CHEST	2173	PACKING BUSHING
1643	RATCHET RING	2221	VALVE LID
1644	VALVE DOWEL	2224	LOWER VALVE BLOCK "O" RING
1645	FRONTHEAD	2236	SWIVEL PIPE
1647	STEEL RETAINER CAP	2237	SWIVEL NUT
1651	HANDLE BOLT	2238	FRONTHEAD BOLT
1720	STEEL RETAINER BOLT	2239	LOCK WASHER

Replacement Parts Listing

APT Replacement Parts

2332	NUT	3251	OIL PLUG
2336	THROTTLE PLUG	3372	FRONTHEAD BOLT & NUT (ASSEMBLY)
2337	THROTTLE VALVE ASSEMBLY	3373	SWIVEL NUT
2342	PLUNGER BUSHING	3384	REDUCER BUSHING - 1/2" MPT X 1/2" FPT
2343	THROTTLE PLUNGER	3386	1/2" X 1/2" INLET BUSHING
2350	BACKHEAD PLUG	3388	HOSE SWIVEL (7/8" - 24 X 1/2HB)
2477	THROTTLE VALVE	3390	BODY
2492	THROTTLE VALVE HANDLE BOLT	3397	UPPER GUIDE BUSHING
2593	STEEL RETAINER (7/8" X 3-1/4")	3415	F.H. BOLT/NUT/LOCKWASHER (ASSEMBLY)
2648	RETAINER	3461/261	F.H. BOLT/NUT/LOCKWASHER(ASSEMBLY)
2695	BODY	3465	RETAINER
2696	HEX NUT	3468	FRONTHEAD
2697	"C" CLIP	3471	OIL PLUG
2698	SWIVEL (7/8"-24X3/8MPT)	3478	HEX BUSHING (1" X 4-1/4")
2880	FRONTHEAD BOLT NUT	3482	RETAINER
2881	BOLT	3485	PRESSURE SPRING
2949	RIVET BUSTER RETAINER SPRING	3486	HOSE SWIVEL (1/2" NPT X 1/2" HB)
2951	FRONTHEAD BOLT NUT	3487	NUT
2957	SWIVEL PIPE WITH "O" RING	3504	PACKING NUT
2994	RIVET BUSTER RETAINER SPRING	3505	PISTON
2997	PACKING SET	3507	"O" RING
3000	JUMBO RB RUBBER BUMPER	3508	THROTTLE VALVE
3003	BUTT SCREW	3509	BACKHEAD BOLT
3005	PISTON	3510	AUTOMATIC VALVE
3025	RETAINER	3511	TAPPET SEAT
3026	RETAINER	3512	RETAINER LATCH
3027	RETAINER INSERT	3513	RETAINER PLUNGER
3028	LOCK SPRING	3514	RETAINER PLUNGER SPRING
3111	OIL CONTROL BUSHING - BRASS	3515	FRONTHEAD BOLT SPRING
3112	RETAINER LATCH 1-1/4'	3516	SIDE ROD BOLT
3113	OIL PLUG FOR BACKHEAD	3517	SIDE ROD BOLT NUT
3115	1-1/8" RETAINER LATCH	3518	LOCK WASHER
3127	FRONTHEAD BOLT SPRING	3519	ANVIL BLOCK (TAPPET)
3134	BOLT & NUT (ASSEMBLY)	3520	"O" RING
3143	FRONTHEAD COMPLETE	3521	"O" RING
3146	LEVER PIN	3528	THROTTLE VALVE
3147	LEVER	3529	BUSHING
3150	THROTTLE VALVE PIN	3530	RETAINER LATCH
3151	THROTTLE VALVE	3537	FRONTHEAD BOLT ASSEMBLY
3152	BARREL	3572	CYLINDER PLUG
3153	BARE HANDLE	4357	BACKHEAD
3157	MAIN VALVE	4360	THROTTLE VALVE (STEEL) W/"O" RINGS
3158/3156	FRONT & REAR VALVE (SET ONLY)	4374	UPPER SLEEVE
3160	VALVE ASSEMBLY COMPLETE	4386	BUSHING (1-1/8" X6")
3161	LOCK RING COVER	4387	BUSHING (1-1/4" X6")
3162	LOCK RING	4393	REDUCER (1/4" MPT X 1/4" FPT)
3163	EXHAUST DEFLECTOR	4409	SEAL SUPPORT
3164	VALVE PIN	4412	AUTOMATIC VALVE
3165	PISTON	4491	THROTTLE VALVE PIN
3170	RUBBER BUMPER	5549	RETAINER
3171	LOWER SLEEVE	5550	RETAINER
3178	EXHAUST DEFLECTOR	5567	9" JUMBO FLAT CHISEL
3183	BUTT SCREW	5568	5/8" BACKOUT PUNCH
3184	PISTON	5569	3/4" BACKOUT PUNCH
3215	OIL PLUG	5570	9" JUMBO RIPPER
3216	TAPPET	5571	12" JUMBO MOIL POINT
3224	THROTTLE VALVE RUBBER SEAL	5572	RETAINER
3225	THROTTLE VALVE LOCK RING	5671	RETAINER

Replacement Parts Listing

APT Replacement Parts

5672	RETAINER
5691	THROTTLE VALVE (THOR18)
5724	BALLS (SET OF 6)
5725	RETAINER CLIP
5726	SPRING
5727	SLEEVE
5728	RETAINER
5729	SLEEVE
5734	RETAINER
6144	RETAINER
6179	RETAINER
6187	BACKHEAD ASSEMBLY (125PB)
6211	"O" RING
6219	ANVIL BLOCK (TAPPET)
6229	RETAINER LATCH BUSHING
6235	RETAINER LATCH
6277	BACKHEAD BOLT NUT
6280	BACKHEAD
6284	PLUNGER
6286	ROLL PIN
6292	BOLT LOCKWASHER
6293	BACKHEAD BOLT
6295	PISTON
6296	BACKHEAD BOLT NUT
6331	BOLT BUSHING
6334	BOLT/NUT/LOCKWASHER (ASSEMBLY)
6335	LOCKWASHER
6349	BOLT/NUT/LOCKWASHER (ASSEMBLY)
6533	PISTON
6534	PISTON
6825	BACKHEAD DOUBLE "O" RING
7022	RETAINER
7079	RETAINER CAP
7531	HANDLE COMPLETE
8573	THROTTLE VALVE BUSHING
8574	T.V. BUSHING ASSEMBLY
9102	RETAINER
9677	RETAINER LATCH
18065	LONG PIN