

Replacement Parts Listing

Jet Replacement Parts

21A100100	COMPLETE HANDLE	PB30-07	VALVE GUIDE
21A100200	LEVER	PB30-08	VALVE CHEST DOWEL PIN
21A1003A0	LEVER PIN	PB30-10	BACKHEAD SPRING
21A1003B0	LEVER STOP PIN	PB30-12	THROTTLE VALVE STEM
21A1004A0	THROTTLE VALVE	PB30-14	THROTTLE VALVE BUSHING
21A1004B0	T.V. "O" RING	PB30-15	THROTTLE VALVE STEM
21A100500	T.V. BUSHING	PB30-18	TRIGGER AND STOP PIN
21A100600	T.V. SPRING	PB30-19	OIL PLUG
21A100700	T.V. CAP (PLUG)	PB30-20	OIL CONTROL PLUG
21A100800	PUSH PIN	PB30-23	BACKHEAD BOLT & NUT ASSEMBLY
21A100900	PUSH PIN BUSHING	PB30-24	LOCK WASHER
21A101110	PERM. BUSHING	PB30-25	BACKHEAD BOLT NUT
21A101200	VALVE	PB30-28	RETAINER LATCH
21A101500	VALVE LID	PB30-29	RETAINER BOLT, NUT & WASHER ASSEMBLY
21A101600	VALVE CASE	PB30-30	BACKHEAD BOLT NUT
21A101700	VALVE SEAT	PB30-31	BACKHEAD BOLT LOCK WASHER
21A101800	DOWEL PIN	PB30-32	RETAINER BOLT BUSHING
21A201900	2" CYLINDER	PB30-33	RETAINER PLUNGER
21A301900	3" CYLINDER	PB30-34	STEEL RETAINER SPRING
21A401900	4" CYLINDER	PB30-35	AIR INLET SWIVEL
21A10210A	1-2" STROKE PISTON	PB30-36	AIR INLET SWIVEL NUT
21A20210A	1-2" STROKE PISTON	PB30-39	BOLT & NUT ASSEMBLY
21A30210A	3" STROKE PISTON	PB30-40	FRONTHEAD BOLT NUT
21A40210A	4" STROKE PISTON	PB30-43	7/8" X 3-1/4" HEX BUSHING
21A1021HO	BUSHING-HEX	PB30-44	1" X 4-1/4" HEX BUSHING
21A1021RO	BUSHING-ROUND	PB30-44A	7/8" X 3-1/4" HEX BUSHING
21A102300	LOCK	PB30-44B	1" X 4-1/4" HEX BUSHING
21A102800	LOCK SHIELD	PB30-45	OIL CONTROL FELT
21A103200	"O" RING	PB30-46	SWIVEL "O" RING
49701	HANDLE COMPLETE	PB30-47	SPRING
49703	HANDLE LEVER PIN	PB30-49	THROTTLE VALVE
49704	HANDLE LEVER RING	PB30-51	T.V. BUSHING
49705	THROTTLE VALVE BUSHING	PB30-52	THROTTLE VALVE
49706	THROTTLE VALVE	PB30-54	THROTTLE VALVE OIL PLUG
49707	"O" RING	PB60-03	PISTON
49708	THROTTLE VALVE SPRING	PB60-04	AUTOMATIC VALVE
49709	THROTTLE VALVE SPRING PLUG	PB60-05	REAR VALVE CHEST
49712	CYLINDER CAP	PB60-06	FRONT VALVE CHEST
49713	OIL PLUG	PB60-07	GUIDE
49715	VALVE HOUSING BUSHING	PB60-08	VALVE CHEST DOWEL
49716	UPPER VALVE BLOCK	PB60-09	BACKHEAD PLUNGER
49717	LOWER VALVE BLOCK	PB60-10	BACKHEAD PLUNGER SPRING
49718	"O" RING	PB60-12	"O" RING
49721	VALVE KNOCK PIN (2/TOOL)	PB60-13	GRIP
49722	CYLINDER	PB60-14	THROTTLE VALVE (STEEL)
49723	EXHAUST DEFLECTOR	PB60-15	THROTTLE VALVE STEM
49724	UPPER GUIDE BUSHING	PB60-16	THROTTLE VALVE SPRING
49725	"O" RING (2/TOOL)	PB60-17	THROTTLE LEVER
49726	PACKING SET	PB60-18	THROTTLE VALVE PIN
49728	PACKING SET	PB60-20	OIL CONTROL PLUG
49730	PACKING NUT	PB60-23	BACKHEAD BOLT
49731	LOCKING RING	PB60-24	RETAINER BOLT LOCK WASHER
49733	BUTT	PB60-25	BACKHEAD BOLT NUT
49772	PACKING SET	PB60-26	TAPPET SEAT
557911	RETAINER	PB60-27	TAPPET
557912	RETAINER SPRING	PB60-28	RETAINER
PB30-03	PISTON	PB60-29	RETAINER BOLT & NUT ASSEMBLY
PB30-04	AUTOMATIC VALVE	PB60-30	STEEL RETAINER BOLT NUT
PB30-05	VALVE CHEST-REAR	PB60-31	RETAINER BOLT LOCK WASHER
PB30-06	VALVE CHEST-FRONT	PB60-32	RUBBER BUSHING

Replacement Parts Listing

Jet Replacement Parts

PB60-32S	STEEL BUSHING	PB90-18	THROTTLE LEVER PIN
PB60-33	STEEL RETAINER PLUNGER	PB90-19	OIL PLUG
PB60-34	STEEL RET/LATCH PLUNGER SPRING	PB90-20	OIL CONTROL PLUG
PB60-35	SWIVEL	PB90-22	AIR INLET SWIVEL "O" RING
PB60-36	SWIVEL NUT	PB90-23	BACKHEAD BOLT
PB60-37	"O" RING	PB90-24	BACKHEAD LOCK WASHER
PB60-38	SCREEN	PB90-25	BACKHEAD BOLT NUT
PB60-39	FRONTHEAD BOLT, NUT & WASHER	PB90-26	TAPPET SEAT
PB60-40	FRONTHEAD BOLT NUT	PB90-27	TAPPET
PB60-41	FRONTHEAD BOLT LOCK WASHER	PB90-28	RETAINER LATCH
PB60-42	FRONTHEAD BOLT SPRING	PB90-29	RETAINER BOLT & NUT ASSEMBLY
PB60-43	FRONTHEAD BUSHING 1-1/8"	PB90-30	RETAINER BOLT NUT
PB60-43A	1-1/8" HEX BUSHING	PB90-31	RETAINER BOLT LOCK WASHER
PB60-43B	1-1/4" HEX BUSHING	PB90-32R	RUBBER BUSHING
PB60-44	FRONTHEAD BUSHING 1-1/4"	PB90-33	STEEL RETAINER PLUNGER
PB60-45	OIL CONTROL FELT	PB90-34	ST/RET LATCH PLUNGER SPRING
PB60-47	THROTTLE VALVE	PB90-35	AIR INLET SWIVEL
PB60-48	OIL PLUG	PB90-36	AIR INLET SWIVEL NUT
PB90-02	CYLINDER PLUG	PB90-37	AIR SWIVEL NUT "O" RING
PB90-03	PISTON HAMMER	PB90-38	AIR INLET SWIVEL SCREEN
PB90-04	AUTOMATIC VALVE	PB90-39	FRONTHEAD BOLT, NUT, & WASHER
PB90-05	VALVE CHEST	PB90-40	FRONTHEAD BOLT NUT
PB90-06	FRONT VALVE CHEST	PB90-41	FRONTHEAD BOLT LOCK WASHER
PB90-07	VALVE GUIDE STEM	PB90-42	FRONTHEAD BOLT SPRING
PB90-08	VALVE CHEST DOWEL PIN	PB90-43	FRONTHEAD BUSHING 1-1/8"
PB90-09	BACKHEAD PLUNGER	PB90-44	FRONTHEAD BUSHING 1-1/4"
PB90-10	PLUNGER SPRING	PB90-45	OIL CONTROL FELT
PB90-12	VALVE PORT SEAL "O" RING	PB90-48	OIL TANK PLUG
PB90-13	RUBBER GRIP	TPB60-43A	1-1/8" HEX BUSHING
PB90-14	THROTTLE VALVE	TPB60-43B	1-1/4" HEX BUSHING
PB90-15	THROTTLE VALVE BUSHING	TPB90-43A	1-1/8" HEX BUSHING
PB90-16	THROTTLE VALVE SPRING	TPB90-43B	1-1/4" HEX BUSHING
PB90-17	THROTTLE LEVER		